


Telescopic Curtain Track Installation Manual (CUR15)

Product Description

Motorized telescopic curtain track can be adjusted in length within a specific range to suit your window size. It significantly reduces labor costs and saves time in measuring your windows and making custom-sized curtain tracks. It also effectively avoids the errors associated with manual measurement that may cause material waste. With the properties that ordinary motorized single curtain tracks have, the telescopic curtain track enables the double-sided curtains to open or close (double-sided curtains are opened or closed on both sides at the same time). The ratio of track length to extendable length is 1:1.81.

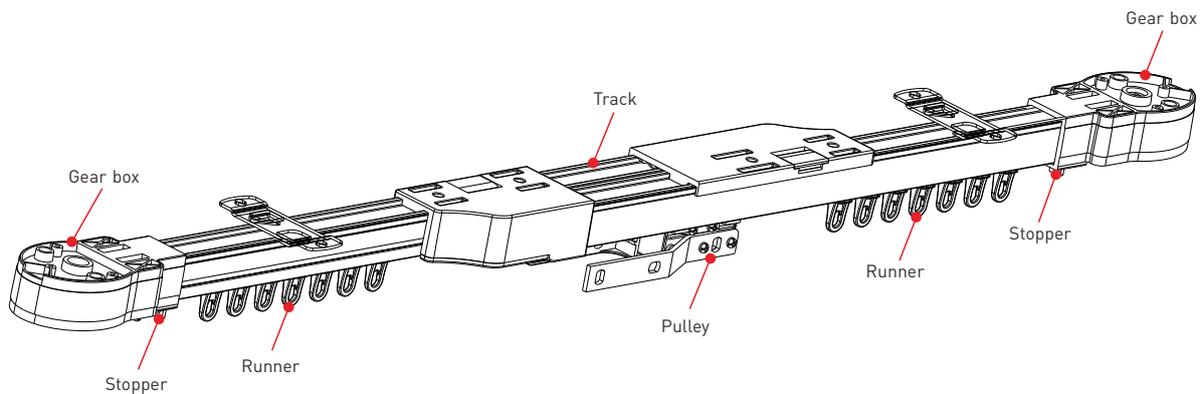


Product model	Extendable length	Dimensions	Package size	Gross weight
CUR15-120-200	1.2-2(m)	L125×W7.5×H5(cm)	L131×W12.5×H12.5(cm)	2.2±0.5(kg)
CUR15-220-400	2.2-4(m)	L225×W7.5×H5(cm)	L231×W12.5×H12.5(cm)	3.4±0.5(kg)

Accessories for the telescopic track


Quantity	Name								
	Product model	Single bracket	Double bracket	Runner	Screw	Expansion bolt	Hook	PVC dust cover	Manual
	CUR15-120-200	4	2	20	12	12	2	1	1
	CUR15-220-400	6	2	40	16	16	2	1	1

Installation Method


1. The curtain motor can be installed either on the left or on the right.

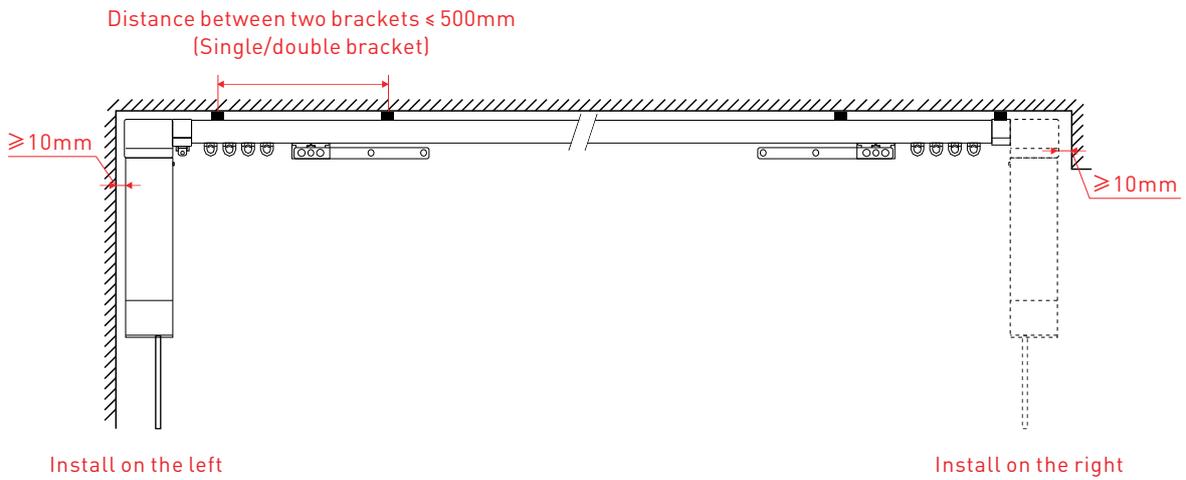

2. If you install a single curtain track, the total width should be no less than 120mm; If you install double curtain tracks, the total width should be no less than 220mm. The width can be adjusted according to the thickness and material of your curtain fabrics and your design.

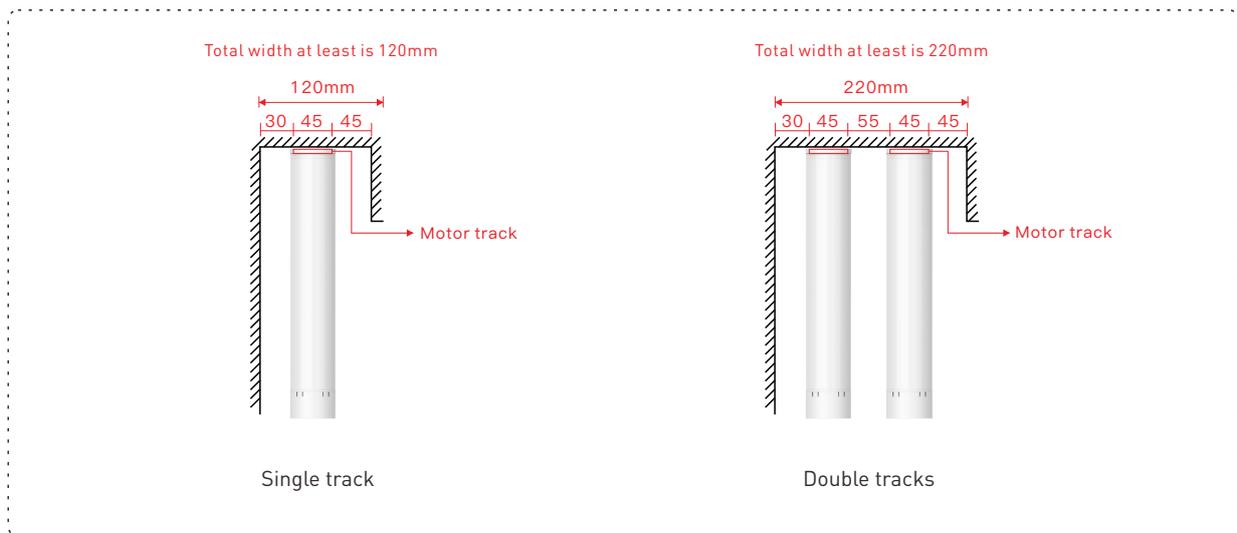


3. The curtain motor comes with a three-prong plug, and the power cable is 1.2 meters in length by default. If you need to extend the power cable, please prepare an extension cord by yourself.

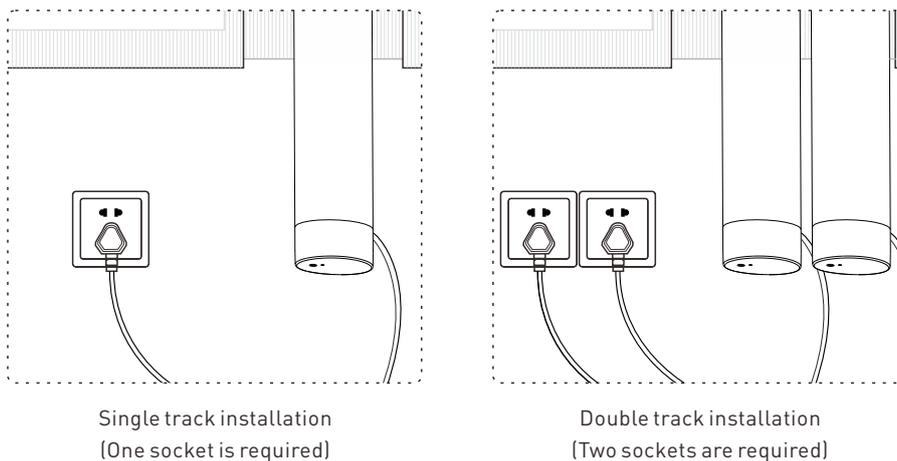


Installation Instructions


1. Open the locking buckles (Mark **2** and Mark **3**) upward, and stretch the track to the window width in the direction of the arrow.
2. Lock the track down with the locking buckles (Mark **2** and Mark **3**). According to the number of your curtain holes, insert the same number of runners on the both sides of the pulley (Mark **7**).
3. Draw the pulley (Mark **6**) back and forth once or twice, and tighten the screws (Mark **1**, Mark **4** and Mark **5**). Please note that the screws (Mark **1**) need to be tightened manually, and try not to tighten up with an electric screwdriver.

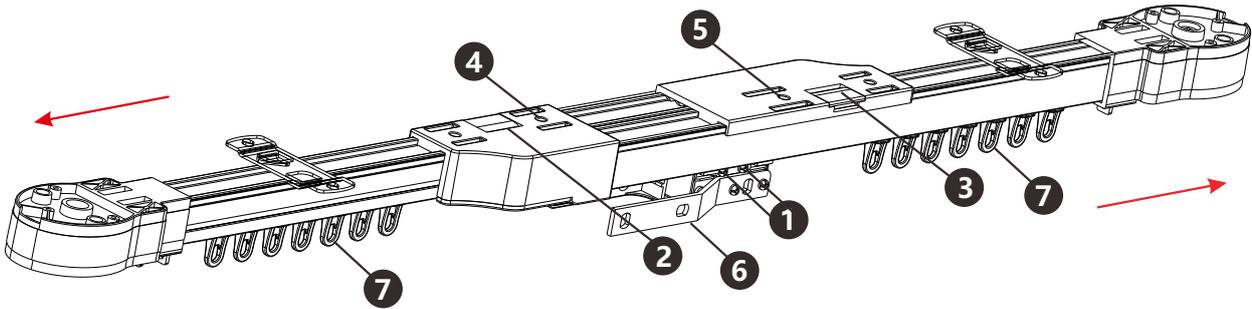


4. Please cut and customize the PVC dust cover as needed, then place the dust cover on the track (As it is shown below: please get the narrow edge up and the wide edge down)

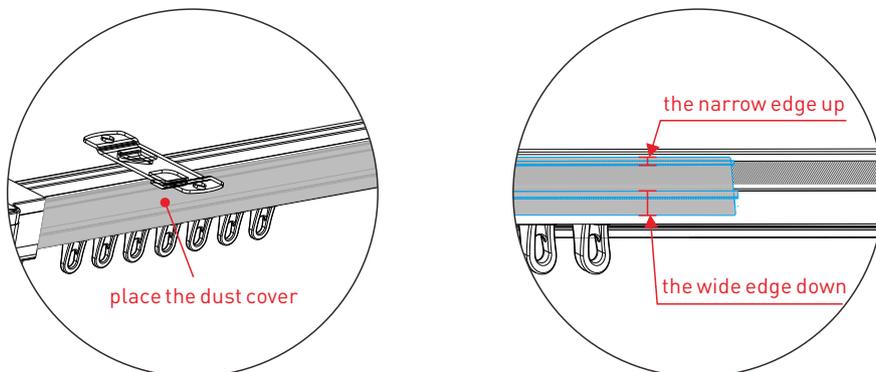

5. Install a right amount of brackets according to the track length you extend (Mark **8**). For example, 4 single brackets and 1 double bracket are needed for a 4-meter track.

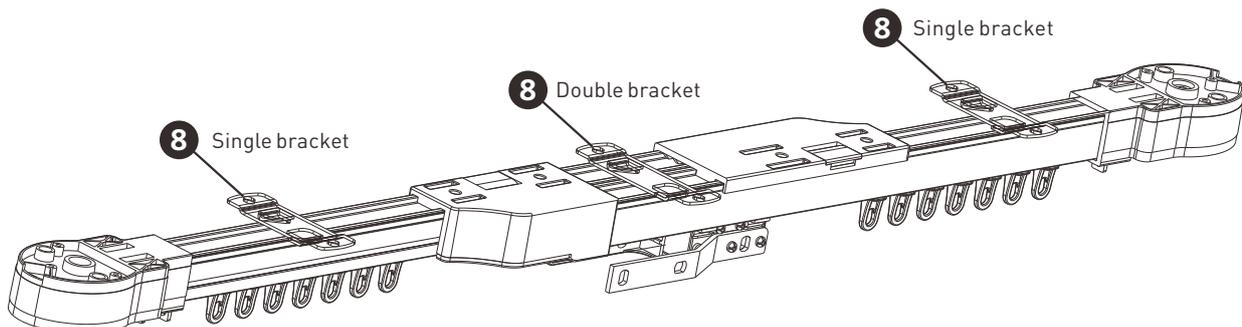

6. Insert the brackets through the screws and tighten the screws (Mark 9) against the ceiling. Then insert the motor (Mark 10) and rotate it clockwise to attach the motor to the gear box. Next, pull down the lock lever (Mark 11) and push it to the right until the lock lever is in the limit hole. After hanging your curtains and powering on the motor and pairing it with App, you'll be able to control the curtains. (For more instructions on how to install and remove the motor, please refer to the motor manual (CG-CUR15))

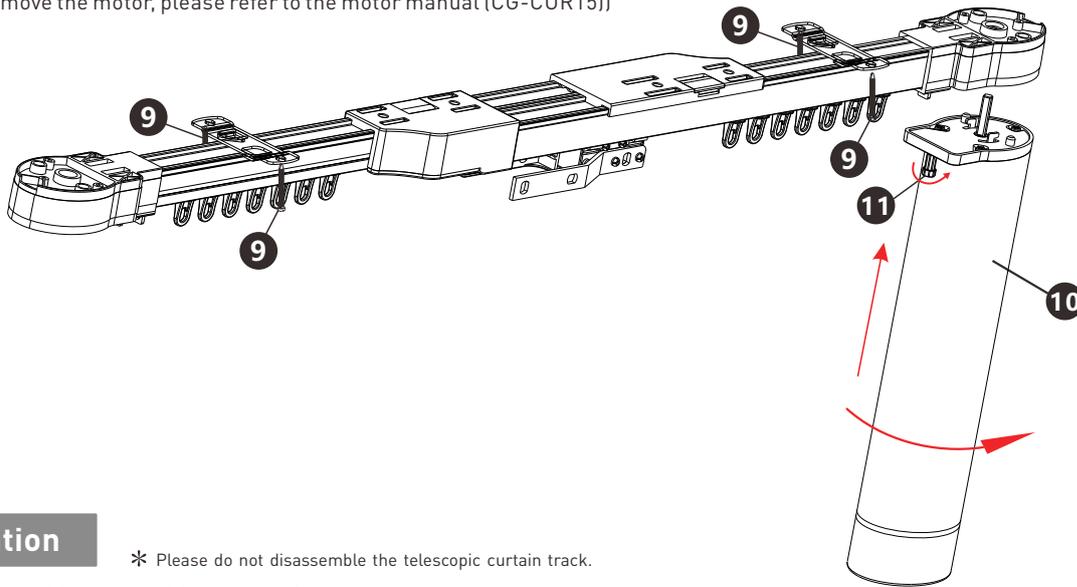

Attention





* Please do not disassemble the telescopic curtain track.

Q1: How to choose a right curtain track for my curtains?

A1: If the width of your curtains is 1.2-2 meter, the recommended model is CUR15-120-200; If the width of your curtains is 2.2-4 meter, the recommended model is CUR15-220-400.

Q2: Does the motor work with other brands of curtain tracks, or does the curtain track work with other brands of motors?

A2: Our curtain motors and curtain tracks are all customized products. And connecting joints and accessories are different between different brands of motors and tracks, so working with other brands of curtain tracks or motors is not recommended.

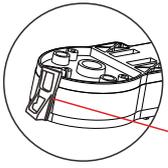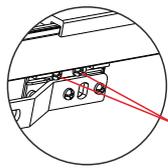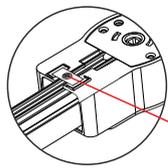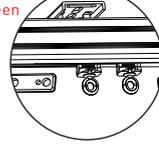Symptom	Possible Cause	Remedy
When the curtains have been hung on the curtain track, there is still light leaking from the sides of your curtains.	/	Add two hooks to the top of both gearboxes to hang more curtains.  Hook
The curtain motor and curtain track run normally when you do the commissioning on the floor, table or in other positions. But they run abnormally or make a high level of noise once installed on the ceiling.	The installation position is shifted that make the limit position of the curtain track change.	After you have installed the curtain motor and the curtain track and powered them on, go to the settings of the curtain motor in the APP to delete the motor (do not force delete or remove it from the network), then add the motor/connect it to the network again.
In the installation process, the motor shaft has been manually rotated that changes the limit position of the curtain track.	The change in the the limit position is caused by operational mistakes.	
The curtains open or close asymmetrically.	1. Forget to draw the two pulleys to the left and right side respectively when installing the curtain track. 2. The motor removal makes the limit position of the curtain track change.	When the curtain motor is powered on, go to the settings of the curtain motor in the APP to delete the motor (do not force delete or remove it from the network). Next power off the motor and loosen the screws (as shown on the right), then draw the two pulleys to the left and right side respectively and add the motor/connect it to the network again.  Loosen the screw
A high level of noise is generated from the telescopic curtain track.	/	Please first loosen the screws at the bottom of both gear boxes, then pull the screws to 2-3 mm and tighten them back.  Loosen the screw
Runners are mistakenly installed between two pulleys.	 Runners between two pulleys Wrong installation: Runners are installed between two pulleys (as shown above). 	The number of runners that come with the curtain track is more than needed. Please install them on the both sides of the pulley (refer to the curtain track manual for detailed instructions). If the extra runners not affect the normal use, please ignore; If they do, please contact a professional personnel to remove them.
Please do not remove the curtain motor (detach the motor from the curtain track) unless it is necessary. If you do, the limit position of the curtain track may be changed.	The motor removal makes the limit position of the curtain track change.	When the curtain motor is powered on, go to the settings of the curtain motor in the APP to delete the motor (do not force delete or remove it from the network), then add the motor /connect it to the network again. The remote and scenes that you previously link with the motor will be cleared once the motor is deleted. Please be careful.